

USER'S MANUAL



Discharge/Water Pump



When using electrical equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read and follow all instructions before using the pump.
2. Check the pump label for voltage required. Do not connect voltage other than that shown.
3. This pump comes with a grounding conductor plug. To reduce the risk of electric shock, connect plug to a properly grounded receptacle.
4. This is an in-line pump, NOT a submersible pump.
5. Support the pump while assembling and installing. Failure to do so may cause pump to fail and/or pipe to break.
6. Keep the cord out of heavy traffic area. To avoid fire hazard NEVER put the cord under rugs or near heat generating devices.
7. Always turn the pump OFF before servicing.
8. Do not operate pump with damaged parts.
9. Never use the pump outdoors.
10. Keep unit away from heated surfaces and open flames.
11. Do not attempt to repair or adjust any electrical or mechanical function of this unit. Doing so will void the warranty.

After reading these instructions, if you have any questions or comments, please call 817-633-1080 or contact our technical support department at support@luraco.com or visit our website at www.luraco.com for more information



LURACO TECHNOLOGIES

THANK YOU FOR SUPPORTING USA PRODUCTS & AMERICAN WORKERS

FEATURES and OPERATIONS

Pump Features

Motor:

- Speed: 3500 RPM
- Power: 1/25 HP
- Single Phase: 30W
- Rotation: CW
- Thermally protected

Pump:

- Capacity: 400GPH
- Pipe Connections:
- Suction: 1"
- Discharge: 1"
- Head: 10 FT
- Pressure: 4.3 PSI
- Weight: 4.0 LB
- Dimensions: 6" x 3.5" x 4.25"

Pump Installation

- The pump must be installed with the inlet of the pump below the surface level of the water being pumped. (Figure 1)
- Pump must be securely mounted in an upright position.
- Do not operate the unit without water. The pump is designed to be cooled by pumping water.

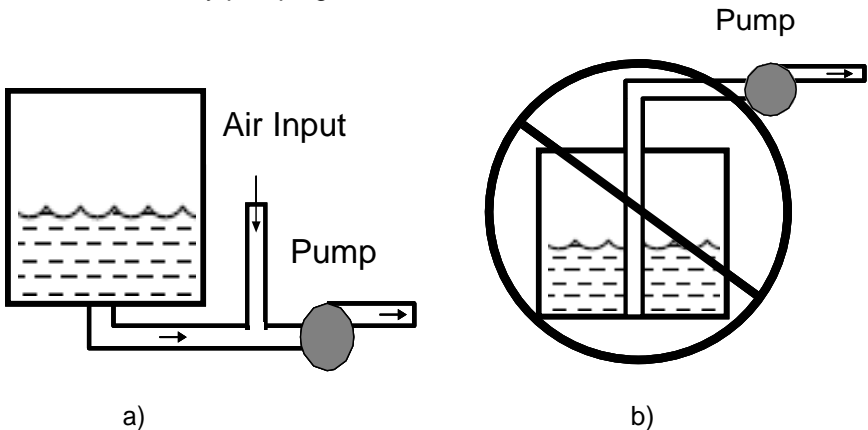


Figure 1

- a) Correct Installation
- b) Incorrect Installation

Pump Electrical Specifications

- Power: 60W
- Thermally protected: 115 °C

WARRANTY INFORMATION

ONE (1) YEAR LIMITED WARRANTY

1. This Warranty applies only to the original purchaser of this product.
2. This Warranty applies ONLY to repair or replacement of any supplied or manufactured parts of this product. The warranty does not cover normal wear, coating, dropped or abused units.
3. Unless otherwise proscribed by law, LURACO shall not be liable for any personal injury, property or any incidental or consequential damages of any kind resulting from malfunctions, defects, misuse, improper installation or alteration of this product.

Attention: Any modification to the product will void the warranty

Important Instructions

If you need to send a unit to us for repair, please follow the steps below.

1. A return must be coordinated with the store where the product was purchased for return authorization from Luraco Health & Beauty.
2. Carefully pack the item in its original carton, if available, or othersuitable box to avoid damage in shipping.
3. Before packing your unit; be sure to enclose:
 - Your name with full shipping address and telephone number
 - A dated receipt to show PROOF OF PURCHASE
 - A note detailing the problem you are having with the unit.

Disclaimers

Limited warranty and liability — Information in this document is believed to be accurate and reliable. However, LURACO Health & Beauty, LLC does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information.

In no event shall LURACO Health & Beauty, LLC be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Notwithstanding any damages that customer might incur for any reason whatsoever, LURACO Health & Beauty, LLC's aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the Terms and conditions of commercial sale of LURACO Health & Beauty, LLC.

Right to make changes — LURACO Health & Beauty, LLC reserves the right to make changes to the product and information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — LURACO Health & Beauty, LLC products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of an LURACO Health & Beauty LLC's product can reasonably be expected to result in personal injury, death or severe property or environmental damage. LURACO Health & Beauty, LLC accepts no liability for inclusion and/or use of LURACO Health & Beauty, LLC products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

THANK YOU FOR BUYING LURACO PRODUCTS



LURACO HEALTH & BEAUTY, LLC

1140 107TH STREET

ARLINGTON, TX 76011

TEL: +1-817-633-1080

FAX: +1-817-633-1085

WWW.LURACO.COM

05/2021