

USER'S MANUAL



MAGNA JET® for HydroBaths



CLEAN – RELIABLE - WORRY FREE

**ATTENTION: NEVER RUN THE JET WITHOUT WATER
ALWAYS MAKE SURE WATER LEVEL IS AT LEAST 1 INCH ABOVE THE JET
BEFORE TURNING IT ON or OFF**

When using electrical equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read and follow all instructions before using the equipment.
2. Do not play with the magnetic impellers.
3. Do not place the magnetic impellers close to each other.
4. Do not place cord in heavy traffic area. To avoid fire hazard NEVER put the cord under rugs or near heat generating devices
5. Always turn off the equipment before servicing.
6. Do not drop or insert any object into any openings.
7. Do not operate equipment if there are any damaged parts
8. Any use not recommended by the manufacturer may cause electrical shock or injury.
9. Do not use outdoors.
10. Do not attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void the warranty.

After reading this owner's guide, if you have any questions or comments, please call 1-817-633-1080 or contact our technical support department at support@luraco.com or visit our website at www.luraco.com for more information

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

FEATURES – OPERATIONS

MAGNA JET Features

- Powerful massaging jet streams.
- Jet assembly can be detached from the pump for quick cleaning and sanitizing.
- Built-in electronics sensor for pump control.
- Long life AC motor.
- Low power consumption.
- Thermally protected.
- Compatible with VSC which controls up to 12 JETs.
- Built-in controlled port for color light.

MAGNA JET System Installation

1. Determine the surface of the tub that you want to install the unit, making sure the surface is flat.
2. Locate a position to drill a hole using dimensions shown in Fig. 1.
3. Insert the unit into the hole from inside the tub. Power cord must be in up position as shown in Fig. 2.
4. **Use a hand screwdriver to tighten the four screws**
5. Plug the power cord of the unit into the MAGNA JET Sensor/Control Box

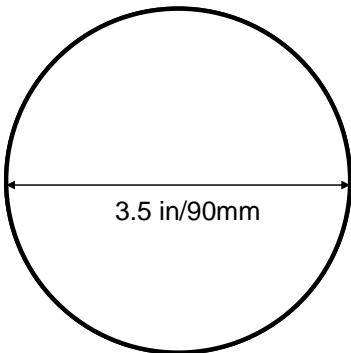


Figure 1. Drill Instruction



Figure 2. Power cord must be in up position as shown above

IMPORTANT:

NEVER RUN PUMP UNLESS WATER LEVEL IS OVER THE TOP OF THE JET FACEPLATE! DOING SO WILL CAUSE DAMAGE!

Cleaning Instructions (Clean after each Use)

1. Make sure the unit is turned off and cleaned after every use!
2. Use the key to remove the JET head from system (Please refer to figure 3)
3. Twist open the top face plate from the body of the unit
4. Lift clear plastic fluid guide by the sides (do not lift by nozzle) to tilt it out.
5. Take out green impeller to clean it free from chemical build up and debris.
6. Reassemble the Jet head (align clear plastic nozzle in lower groove and top notch).
7. Re-insert Jet head back into the designated opening.

Important additional cleaning instructions:

8. Use antibacterial solution or alcohol to clean and sanitize all the parts, especially the surface of shaft and base on the back cover.
9. Always use nonabrasive cleaners!
10. Do not use bleach or acetone! These are caustic substances and can cause corrosive damage to the acrylic basin as well as the gaskets and fittings of the jets and plumbing.



Step 1: Insert the key and engage the locking tabs

Step 2: Pull to remove the JET head

Figure 3. JET Head Removal Instruction

WARRANTY INFORMATION

One (1) YEAR LIMITED WARRANTY

1. Warranty applies only to the original purchaser.
2. Warranty applies ONLY to repair or replacement of any supplied or manufactured parts of this product. The warranty does not cover normal wear, not properly cleaned, dropped or abused unit.

3. Unless otherwise proscribed by law, LURACO Health & Beauty, LLC, Inc. shall not be liable for any personal injury, property or any incidental or consequential damages of any kind resulting from malfunctions, defects, misuse, improper installation, unmaintained, or alteration of this product.

Attention: Any modification to the MAGNA JET will void the warranty.

Disclaimers

Limited warranty and liability — Information in this document is believed to be accurate and reliable. However, LURACO Health & Beauty, LLC does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information.

In no event shall LURACO Health & Beauty, LLC be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal and/or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Notwithstanding any damages that customer might incur for any reason whatsoever, LURACO Health & Beauty, LLC' aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the Terms and conditions of commercial sale of LURACO Health & Beauty, LLC.

Right to make changes — LURACO Health & Beauty, LLC reserves the right to make changes to the product and information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — LURACO Health & Beauty, LLC products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of an LURACO Health & Beauty, LLC' product can reasonably be expected to result in personal injury, death, severe property or environmental damage. LURACO Health & Beauty, LLC accepts no liability for inclusion and/or use of LURACO Health & Beauty, LLC products in such equipment or applications and therefore such inclusion and/or use is at the customers own risk.

THANK YOU FOR BUYING LURACO HEALTH & BEAUTY PRODUCTS

LURACO HEALTH & BEAUTY, LLC

1140 107TH STREET

ARLINGTON, TX 76011

TEL: +1-817-633-1080

FAX: +1-817-633-1085

WWW.LURACO.COM